


## REACH/REACH PLUS ALARM UNIT

# Self Installation instructions

## Please find enclosed your At-Home Alarm and Touch 2 Pendant.

All the equipment is ready to use (see below) and will be activated by following the instructions overleaf.

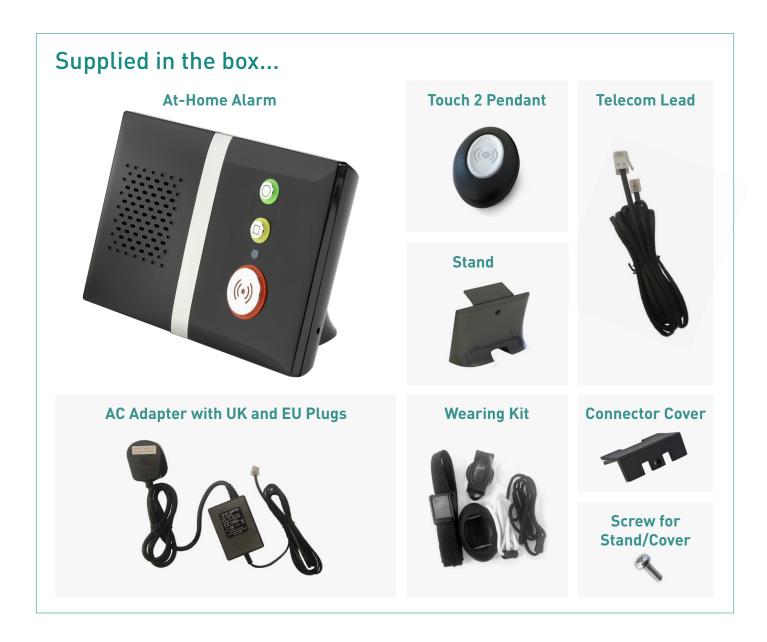


#### Legrand Assisted Living & Healthcare

Blyth Workspace, Commissioners Quay, Quay Road, Blyth, Northumberland NE24 3AG.

T: +44 (0) 1670 352 371 | www.aidcall.co.uk | www.jontek.co.uk | www.tynetec.co.uk




## Setting-up the Reach/ Reach Plus At-Home Alarm unit

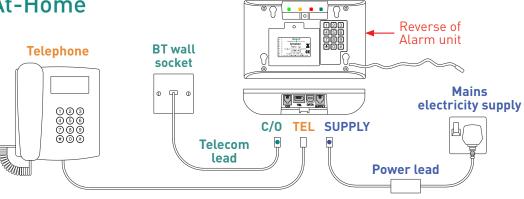

At-Home Alarm unit

- 1 Unplug the Telephone from the BT wall socket and plug it into the Alarm unit TEL socket.
- Connect the Telecom lead between the Alarm unit C/O socket and the BT wall socket where the telephone was originally plugged in. If you have broadband your service provider will supply an ADSL Filter module to plug into the telephone line. To connect the computer, telephone and Reach unit see diagram (right):

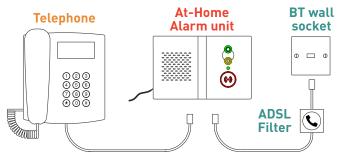

Place the Alarm unit close to the BT wall socket and an available Mains electricity supply (ideally without using an extension). Plug in the Power lead between the Alarm unit SUPPLY socket and the mains supply. Switch on and the front light will flash RED/AMBER/GREEN for about 12 seconds.



The status light will turn green once the unit has a signal.
This may take up to 1 minute.

Test your Touch 2 Pendant from the furthest points in your home.

The Alarm unit will announce "Please wait - dialing for assistance" and you will be connected to your provider who will confirm you are all operational.



Simply press the **Touch 2 Pendant** button once.

The button will **FLASH RED (( • ))** for several seconds to confirm a call is being made.

## Making an Alarm Call from the Reach/Reach Plus unit

Press the large red button on the front of the unit and it will announce "Please wait - dialing for assistance" and the alarm call will be made.



#### Legrand Assisted Living & Healthcare

Blyth Workspace, Commissioners Quay, Quay Road, Blyth, Northumberland NE24 3AG. T: +44 (0) 1670 352 371 | www.aidcall.co.uk | www.jontek.co.uk | www.tynetec.co.uk